

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### MARANTEC

#### PROGRAMMING A MASTER REMOTE

1. The opener must be switched on.
2. Hold the P button until you see this symbol flashing.
3. Press and release the P button again. This icon will flash.
4. Press and release the P button. This WIFI icon will flash.
5. Press any button on your remote. The WIFI icon will be solid.
6. Release the button on your remote. The WIFI icon will flash.
7. Press and release the P button to save and end programming. A solid ON icon will be displayed.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

