

 


CONSIDER: Set up camera first on a bench, close to WiFi router, before mounting camera in place.

OPEN THE PACKAGING

STEP ONE

OPTIONAL: insert SD card into camera now for recording before connecting power (requires FAT32 format, 32GB - 128GB)

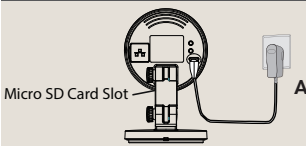

Micro SD Card Slot

AND



Ensure your wireless router is turned on and the camera is within range

ADDING THE CAMERA

Before you continue, make sure your Smart Hub is online and you have the B&D App downloaded to your smart phone.

STEP TWO

Open the App and go into the settings



STEP THREE

Select: Devices -> Add Camera Connect a new camera

Then select Wi-Fi Setup.



STEP FOUR

Check green light is on, on camera


Place phone screen in front of camera to register



STEP FIVE

Select how your camera will display in the APP.

Then select Save.

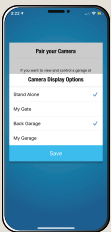


CONSIDER: mounting the camera in a position that provides a clear / unobstructed view.

MOUNT THE CAMERA




ELECTROCUTION! Be mindful not to drill into existing wiring as this may result in serious harm and or death.

STEP SIX

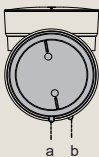

Rotate the base of the camera until points "a" and "b" are aligned, to remove mounting plate

STEP SEVEN

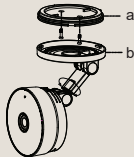

Install mounting plate "a" to wall or ceiling with screws.

Align points "a" and "b" to insert camera base to plate. Rotate clockwise to secure in place




Check out the **?** HELP menu on the home page in the APP for more instructions


CONFIGURE THE CAMERA

STEP EIGHT

Image settings can be adjusted using the camera controls on the stand alone camera page.

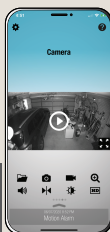


You can receive notifications on motion and/or sound detection and adjust the sensitivity.

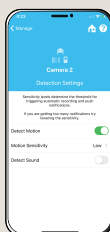

Ceiling mounted cameras, flip image vertically from button.

Select:
Settings ->
Devices ->
Your Camera
Manage ->
Detection Settings

CAMERA DETAIL

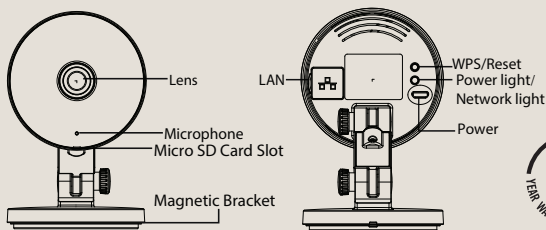

refer to bnd.com.au for full warranty details.

RESET THE CAMERA

To restore the camera back to factory settings:

1. Hold the Reset button for about 10 seconds with the camera powered on.
2. Release the button and wait about 30 seconds. The camera will automatically restart, and restore factory settings.

CHANGE WI-FI NETWORK

First, setup the Smart Hub on the new network and then:

1. Open the Smart Hub phone app and remove the camera from the Smart Hub.
2. Reset the camera using the instruction above.
3. Re-follow the instructions "Adding the Camera".

FOR WIRED CONNECTIONS

To connect the Camera to your home network using a wired connection, connect the Camera to your router using the Ethernet cable before you follow the "Adding the Camera" instructions.

FOR WPS SETUP

To use WPS to connect your Camera to your home network, hold the 'WPS' button on the back of the camera for 2 seconds and then press the WPS button on your Wi-Fi router within 60secs.

NOTE - Your router must have WPS enabled (refer to the routers user manual)

After WPS has successfully completed, proceed with the "Adding the Camera" instructions.