

 


CONSIDER: setting up camera via ethernet cable before installing in position.


OPEN THE PACKAGING

STEP ONE

OPTIONAL: insert SD card into camera now for recording before connecting power (requires FAT32 format, 32GB - 128GB)



AND

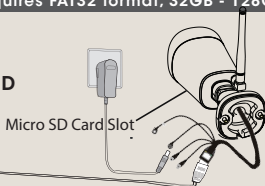

Ensure your wireless router is turned on and ethernet cable connected to camera

 
Connect the antenna and AC adaptor to the camera and switch on

ADDING THE CAMERA

Before you continue, make sure your Smart Hub is online and you have the B&D App downloaded to your smart phone.

STEP TWO

Open the App and go into the settings



STEP THREE

Select: Devices -> Add Camera

Then select the camera listed at top.

 


STEP FOUR

Once the camera is registered, click Next

Select how your camera will display in the APP.

Then select Save.




STEP FIVE

Disconnect and connect to outdoor power source

Select: Settings -> Devices -> Camera Outdoor -> Manage ->

 Then select Refresh.




CONSIDER: mounting the camera in a position that provides a clear / unobstructed view.

MOUNT THE CAMERA



ELECTROCUTION! Be mindful not to drill into existing wiring as this may result in serious harm and or death.


STEP SIX

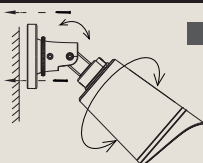

WALL

Secure the mounting to wall with screws and adjust arm to desired position

OR

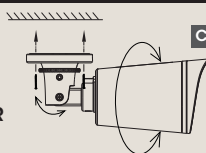

CEILING

Secure the mounting to ceiling with screws and adjust arm to desired position




Check out the **?** **HELP** menu on the home page in the APP for more instructions

CONFIGURE THE CAMERA

STEP SEVEN


Image settings can be adjusted using the camera controls on the stand alone camera page.

Ceiling mounted cameras, flip image vertically from  button.




You can receive notifications on motion and/or sound detection and adjust the sensitivity.

 Select:
Settings ->
Devices ->
Your Camera
Manage ->
Detection Settings



CAMERA DETAIL

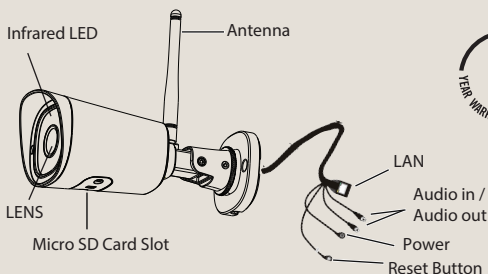

refer to bnd.com.au for full warranty details.

RESET THE CAMERA

To restore the camera back to factory settings:

1. Hold the Reset button for about 10 seconds with the camera powered on.
2. Release the button and wait about 30 seconds. The camera will automatically restart, and restore factory settings.

CHANGE WI-FI NETWORK

First, setup the Smart Hub on the new network and then:

1. Open the Smart Hub phone app and remove the camera from the Smart Hub.
2. Reset the camera using the instruction above.
3. Re-follow the instructions "Adding the Camera".