

Program NiceHome FILO Remote (Mode 1)

1. Remove the cover of the motor
2. Press and hold button L4 on the motor until the LED comes on solid then let go
3. In less than 10 seconds press any button on the remote and let go after the L4 LED flashes 3 times
4. The L4 LED will stay on solid for 15 seconds to allow additional remotes to be coded in, if there are no more remotes to code, simply wait for the L4 LED to go out and test your remote

www.remotepro.com.au



WARNING

To prevent possible SERIOUS INJURY or DEATH:

- Battery is hazardous: NEVER allow children near batteries.
- If battery is swallowed, immediately notify a doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace ONLY with the same size and type battery
 - DO NOT recharge, disassemble, heat above 100° C or incinerate
- Battery will cause SEVERE or FATAL injuries in 2 hours or less if swallowed or placed inside any part of the body.

